

Extra - fort

GRANDE TAILLE

USER MANUAL



EBERHARD & C^o

Manufacture Suisse d'Horlogerie depuis 1857



The Eberhard & Co. watch manufactory was founded by Georges-Emile Eberhard at La Chaux-de-Fonds back in 1887. Ever since, the venture has specialised in the making of chronographs.

In this capacity, it has attained a highly respected position in the world of high-grade watches. With the introduction, at a later stage, of sportively elegant watches it has furthermore augmented this status of the Eberhard & Co. brand name.

Eberhard's success story is backed by consistent deployment of advanced technology, meticulous craftsmanship and, not least, by observing that long tradition of superior workmanship which has made Swiss watchmaking a household name.

Today, with well over a century gone by, watches by Eberhard & Co. continue to stand for that high-grade quality and those excellent virtues which will please even the most demanding of connoisseurs.



Extra - fort GRANDE TAILLE

Created in the 50s and immediately hailed as a symbol of its era, Extra-fort is a chronograph, which perfectly displays Eberhard & Co.'s ability to grasp and restore the spirit of an epoch.

For this new millennium, the Swiss Maison wanted to refresh the personality and features of this historic model, by offering it in several versions.

This edition of the chronograph has an amply-dimensioned steel case (41mm diameter), giving the collection a strong impact.

Extra-fort combines classical, refined esthetics with an absolutely contemporary character, providing a successful synthesis of tradition and innovation.

INFORMATION REGARDING THE INTERNATIONAL GUARANTEE

We hereby guarantee your Eberhard & Co. watch against any defects in manufacture or materials for a period of 24 months, subject to normal conditions of use.

This guarantee does not cover:

- damage caused by improper technical handling or by shocks
- wear to the strap, glass, crown or any other part during normal watch use.

For technical revisions of the Eberhard & Co. "Extra-fort Grande Taille" model please contact only technical service facilities authorised by Eberhard & Co. The eventual shipping and insurance charges are to be paid by the owner.

We recommend to have the movement checked and overhauled every two years.

For our part, we shall always endeavour to give full satisfaction.



A Push button to start and stop the chronograph

B Push button for setting to zero all hands of the chronograph

C Winding crown

D Hours-hand of the watch

E Minutes-hand of the watch

F Small continuous seconds-hand

G Centre-seconds-hand counter of the chronograph

H 30-minutes chronograph register-hand

I Date indicator

L Tachometer scale

M 1/5 second scale

FEATURES

The Extra-fort Grande Taille has a mechanical automatic-winding movement. Screwed-in crown and vaulted sapphire glass, the caseback is fixed with 6 screws.

From this collection, the following version is available:

- Case in stainless steel with crocodile leather-strap or with steel bracelet.
Water-resistant down to 5 atm.

READING THE DIAL

On the Extra-fort Grande Taille dial there are 2 counters which have the following functions:

- Small continuous seconds-hand **F**
- 30-minutes chronograph register-hand **H**

The chronograph seconds are given by the centre-hand **G**

The calendar is situated at 6.

PUSHBUTTONS

Make sure pushbuttons are always pressed in following order:

A : start

A : stop

B : return to zero

Abide by this sequence quite severely so as to preclude damage to the mechanism.

Never make use of the push-buttons under water since they are not watertight while being pressed.

USE OF THE CROWN



POSITION A - Screwed-in crown, guaranteed water-resistance



POSITION B - TWINDING OF THE WATCH - To unscrew the crown turn it counter-clockwise.

When it is unscrewed, turn it clockwise to transmit the manual charge to the movement. If your Extra-fort Grande Taille has not been worn for some time, the automatic movement has to be wined manually, in order to obtain an immediate sufficient power-reserve and to ensure an accurate working of the watch.



POSITION C - RAPID DATE-SETTING: Pull the crown to the first catch.

Turning the crown clockwise you will operate for setting the desired date.

IMPORTANT: Never make the correction of the date between 10 p.m. and 1 a.m.



POSITION D - TIME SETTING - Pull the crown to the second catch to set the time.

IMPORTANT

To set back the crown, push it lightly against the watch case while twisting it clockwise until it is fully screwed back in.

OPERATING INSTRUCTIONS FOR THE CHRONOGRAPH

Press the push-button **A** to start the chronograph mechanism. Press the push-button a second time to stop the chronograph mechanism. You can now read on the counters how many seconds **G** and minutes **H** have elapsed. Press the push-button again and the chronograph will restart from the intermediate stop. To return to zero, the chronograph must be in the stop position.

Press the second push-button **B** and all hands will return to zero. You are advised not to leave the chronograph mechanism operating continuously.

HOW TO USE THE TACHOMETER SCALE

The outer rim on the dial shows the data needed for metering the speed of a vehicle over a distance of 1,000 metres. The moment the vehicle passes the first reading marking the beginning of said 1,000m distance, activate the hand **G** of the chronograph to bring it to a stop the moment the vehicle passes the second reading mark. Said hand **G** will now indicate the average speed reached in km/h in tune with the tachometer scale. Example: when one kilometre is covered within 45 seconds, the average speed displayed by the centre seconds-hand **G** on the tachometer scale will be tantamount to a speed of 80km/h.

1/5 SECOND SCALE

The division on the dial of this model **M** enables the user to make observations not just to approximately a second, but to the order of 1/5 second.

DIRECTIONS FOR USE OF WATERTIGHT WATCHES

You may wear your “Extra-fort Grande Taille” when in the water or when taking a shower, but it is not fit for breath-held diving, plunging or diving activities. Important: we strongly recommend that you have the crown well tightened before possible contacts with water. Do not activate the pushbuttons nor manipulate the crown as long as the watch is wet or in the water. After using in seawater, rinse the watch under fresh water. Exposure to temperature shocks should be avoided. We recommend that you have the water-resistance checked at least once a year by a qualified technical service facility in order to find out if the gaskets need to be replaced.



www.eberhard-co-watches.ch