

*Gilda*

USER MANUAL



**EBERHARD & CO**

*Manufacture Suisse d'Horlogerie depuis 1887*



The Eberhard & Co. watch manufactory was founded by Georges-Emile Eberhard at La Chaux-de-Fonds back in 1887. Ever since, the venture has specialised in the making of chronographs.

In this capacity, it has attained a highly respected position in the world of high-grade watches. With the introduction, at a later stage, of sportively elegant watches it has furthermore augmented this status of the Eberhard & Co. brand name.

Eberhard's success story is backed by consistent deployment of advanced technology, meticulous craftsmanship and, not least, by observing that long tradition of superior workmanship which has made Swiss watchmaking a household name.

Today, with well over a century gone by, watches by Eberhard & Co. continue to stand for that high-grade quality and those excellent virtues which will please even the most demanding of connoisseurs.



# Gilda

With its new “Gilda” collection, Eberhard & Co., pays homage to women, celebrating their femininity in all its shapes and forms.

The smooth lines of the elliptical case, created to frame the delicacy of the wrist, the harmony of the exclusive detailed features and the delicate floral motif engraved in the case back, reveal the modern, timeless elegance of today’s woman.

Precious materials, including mother-of-pearl and diamonds, embellish the various versions of “Gilda”, each refined in essence.

## INFORMATION REGARDING THE INTERNATIONAL GUARANTEE

We hereby guarantee your Eberhard & Co. watch against any defects in manufacture or materials for a period of 24 months, subject to normal conditions of use.


This guarantee does not cover:

- damage caused by improper technical handling or by shocks
- wear to the strap, glass or any other part during normal watch use.

For technical revisions of the Eberhard & Co. “Gilda” model please contact only technical service facilities authorized by Eberhard & Co. The eventual shipping and insurance charges are to be paid by the owner.

You are advised to check and overhaul the mechanism as soon as the battery power is exhausted. You are also advised to have an exhausted battery replaced immediately to prevent leakage of its contents, which could damage the movement.

For our part, we shall always endeavour to give full satisfaction.

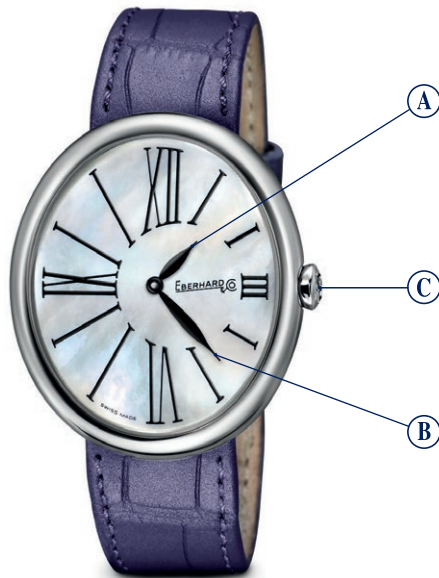

- A Hour hand
- B Minute hand
- C Crown



#### CASE BACK

The case back is engraved with a delicate floral motif on the interior in which can be seen the name “Gilda” in red enamel. In order to avoid damaging this decoration, this must not be polished or treated with ultrasound.

#### OPENING THE CASE BACK

The screws for opening the case back are located in the base of the strap/bracelet, and in order to access them this has to be removed.

## FEATURES

Watch with quartz movement and elliptical-shaped case with a curved profile, enabling it to shape the wrist. The domed, patented sapphire glass has an anti-reflection treatment. In the gold version, the crown is in 18ct gold and features a relief of the shield Maison emblem. The case back is sealed with 4 concealed screws.

The available versions include:

- steel case with alligator strap and elliptical buckle customized with the “E”, or with steel “Chéri®” bracelet. Water-resistant to 5 ATM.
- 18ct 5N red gold case with alligator strap and elliptical shaped steel plated buckle customized with “E”. Water resistant 3 ATM.

## INSTRUCTIONS FOR REMOVING THE STRAP OR BRACELET

In order to remove the strap or bracelet correctly, it is necessary to remove the fastening screws, using an appropriate screwdriver. Since the screws are of the self-blocking type, before repositioning them, make sure they are correctly placed. If they are worn or damaged, it is recommended that they be replaced.

## PLEASE NOTE

In view of the particular attachment, it is recommended that original, specially-made Eberhard & Co. straps be used. For replacements, we recommend you consult an authorized dealer or seek assistance from an authorized Eberhard & Co. centre.

## OPERATING THE CROWN



### POSITION A

Crown closed, water-resistance guaranteed.



### POSITION B

SETTING THE TIME: pull out the crown. In this position you can set the hours and minutes.

## IMPORTANT:

To close the crown, push it in towards the case. Only in this position is water-resistance guaranteed.

## CARING FOR WATERPROOF WATCHES

The “Gilda” model in the 18ct gold version is guaranteed against accidental contact with water (rain or small splashes), whereas the steel version can be used in water or under the shower, but neither is suitable for activities such as swimming, diving or underwater sports. Be careful not to pull out the crown, when the watch is near water.

Check for the need to replace accessories at least every two years and in any case replace them when replacing the battery, and consult a qualified technical assistance centre. In case of heavy usage, annual checks are recommended.



[www.eberhard-co-watches.ch](http://www.eberhard-co-watches.ch)